

# **Model 7820B**

## Portable Bench Scale





- Battery Operated
   — Rechargeable sealed lead-acid battery installed with each unit
- Backlit Display

   6-digit backlight display
   with 3 operating modes available for battery

   life conservation
- Weight Hold

   Two weight hold operating modes available
- Rugged Construction

   Die-cast base and loadbridge, stainless steel shroud
- Portable
   — Carrying handle makes it easy to move from one location to another



## Model 7820B Portable Bench Scale

#### **Features**

**Construction:** Stainless steel weight platter, die cast aluminum base and loadbridge, aluminum handle

**Remote Display:** 6-digit backlit display housed in an extruded enclosure with a 1.5" cable assembly with RJ45 connector. Includes 6" magnetic strip.

#### **Remote Display Enunciators:**

Zero- Indicates the scale is at zero weight
Hold- Indicates the weight hold feature is active
AC Power- Indicates AC Power is connected to the scale
and charging the battery

#### **Remote Display Controls:**

**Zero Key-** Includes 2% Auto Zero tracking or manual push button to reestablish zero reference. Turns the scale OFF, when operated via battery.

**Hold Key:** Enables or disables weight hold feature. Enters into backlit and weight hold setting configuration.

#### Weight Hold Settings:

**Single-** Allows you to hold the parcel weight on the display for one parcel

**Auto-** Allows you to hold the parcel weight on the display for unlimited parcels

**Sealed-** Some states may not accept weight hold in NTEP approved applications. The sealed mode disables the weight feature.

#### **Backlit Settings:**

Auto- Back light turns off after 5 seconds of non use On- Back light is always on Off- Back light is always off

#### **Battery Conservation:**

**Sleep-** After 5 minutes of non-use the scale will enter into sleep mode. Pressing the zero key will re-activate the scale. **Auto Shutdown-** After 1 hour of non use the scale will shutdown. Pressing the restart button will re-start the scale.

**Restart Button:** While in battery operation mode, the restart button (located on the rear of the scale) turns on the scale

**Hard Wired Battery Cable:** Battery cable is hard wired to main PCB, no external connections

#### **Battery Life:**

Stored, no use - 14 days
Back light Off - 40 hours
Back light On - 12 hours
Back light Auto - 24 hours
Re-charge time - 8 hours
Re-charge cycles - 400 minimum

RS-232 Interface: 9-pin using Standard NCI protocol

**Field Calibration:** Alternate span points, 10 or 50 lb, can simplify field calibration. Can be set up either in decimal pound or kilogram.

### **Specifications**

Capacity (lb)

Capacity (kg)

200 x 0.05 lb

100 x 0.02 kg\*\*

Note: Rounding method is scale

\*\* Metric Weighing can be configured in the field during calibration

Internal Resolution: 1 part in 120,000

#### **Dimension:**

12" x 19.5" x 4.6" (318 mm x 495 mm x 117 mm) standard configuration

12" x 14" x 4.1" (318 mm x 358 mm x 104 mm), no handle

#### AC Power: Inline Transformer, UL/CSA Approved

Input: 120 VAC (+10%-15%), 60Hz standard 3-wire ground

Output: 14 VDC (min) @ 730 mA

DC - 12 VDC/1.3AH Sealed lead acid battery

#### **Operating Environment:**

Temperature: 42° F to 104° F (5° C to 40° C) Relative Humidity: 10 to 95% (non-condensing)

#### Input/Output:

RS-232, bi-directional, configurable 1200-19.2K. Transmits weight and scale status whenever a "W" <CR> is sent by remote device.

Scale Weight: 16 lb, standard configuration
Shipping Weight: 24 lb, standard configuration
Approvals: NTEP Class III, 4,000d CC #95-070



#### **Brecknell**

1000 Armstrong Dr., Fairmont, MN 56031 Toll free: 800-637-0529, Tel: 507-238-8702 Fax: 507-238-8271

e-mail: sales@brecknellscales.com www.brecknellscales.com

