



# PS1000 / PS2000 Floor Scales

## Features

**Construction**– Rugged steel with tread plate surface protects animals and handlers from accidental slips and falls. Adjustable foot pads allow scale to work effectively on uneven floors.

**Overload Capacity**– Capable of withstanding 150% capacity of weight without damaging the scale

**Easy Assembly**– No installation costs or parts that require maintenance. Just place the scale on a hard surface and level by adjusting the foot pads. Connect the indicator and turn on the power.



PS2000 shown with optional indicator stand



PS1000 shown with optional indicator stand

## Specifications

### Capacity

PS1000: 1,000 lb x 0.5 lb (500 kg x 0.2 kg)

PS2000: 2,000 lb x 1.0 lb (1000 kg x 0.5 kg)

**Power**– Four (4) AAA batteries or 6 VDC, 500mA adapter, both included

**Operating Temp**– 41° F to 95° F (5° C to 35° C)

**Battery Life**– 20 hours

**Display**– Five 0.625" digits (17 mm) LCD

**Serial Port**– One full duplex RS232, with cable

**Keyboard**– Hold/Print, Units, Tare, On/Off/Zero

**Unit**– lb, kg, lb/oz



**Indicator**– 6.5" L x 3.2" H x 1.2" W

### Scale Weight & Dimensions

PS1000: 60 lb (27 kg) 55.75" L x 20.25" W x 2.5" H

PS2000: 105 lb (48 kg) 59" L x 30" W x 2.5" H

### Scale Carton Weight & Dimensions

PS1000: 90 lb (41 kg) 57.5" L x 22" W x 4" H

PS2000: 118 lb (54 kg) 64" L x 36" W x 7" H


### Option

Indicator stand

Stand height: 36"; weight 11 lb

Stand base: 11.5" L x 11.5" W x .75" H

**Certifications**– Full FCC compliance, UL/CUL power adapter

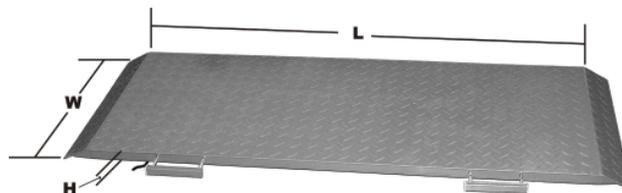

a division of Avery Weigh-Tronix, LLC

## Salter Brecknell Weighing Products

1000 Armstrong Dr., Fairmont, MN 56031

Toll free: 800-637-0529, Tel: 507-238-8702

Fax: 507-238-8271

e-mail: sales@salterbrecknell.com

www.salterbrecknell.com

