


*Caution: The break-off pieces may fly off while twisting. Take reasonable precautions to prevent any flying pieces from causing injury.*

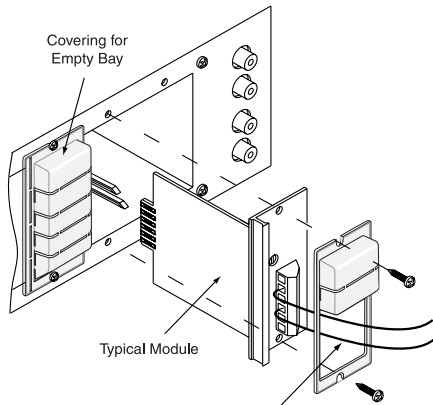


Feed wires through cover before making connections.


Use 12mm screws.



**Example 1**  
All break-offs removed.

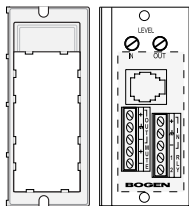

**Example 2**  
One break-off removed.

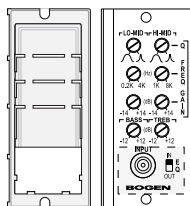

*Break sections off as needed to expose connector.*